

# **Application Note**

## **TFTP\_Client Example**

**Version 1.0.0**



© 2024 WIZnet Co., Ltd. All Rights Reserved.

For more information, visit our website at <http://www.wiznet.io>

## Contents

<b>1 Introduction.....</b>	<b>3</b>
<b>2 Github Link .....</b>	<b>3</b>
<b>3 Applicable products .....</b>	<b>3</b>
<b>4 How to Test TFTP Client Example.....</b>	<b>3</b>
4.1     Step 1: Prepare software .....	3
4.2     Step 2: Prepare hardware.....	3
4.3     Step 3: Setup TFTP Client Example .....	4
4.4     Step 4: Build .....	5
4.5     Step 5: Upload and Run.....	6
<b>Revision history .....</b>	<b>10</b>

## Figures

FIGURE 1. USB MASS STORAGE.....	6
FIGURE 2. TERA TERM .....	6
FIGURE 3. CONFIGURE TFTP SERVER .....	7
FIGURE 4. CREATE TEST FILE.....	7
FIGURE 5. TFTP CLIENT READ SUCCESS.....	8
FIGURE 6. RUN TFTP SERVER .....	8
FIGURE 7. TFTP CLIENT READ FAIL.....	9
FIGURE 8. TFTP CLIENT WIRESHARK RESULT .....	9

## Tables

TABLE 1. REVISION HISTORY .....	10
---------------------------------	----

---

## 1 Introduction

This Application Note covers the implementation of TFTP Client on WIZnet's TOE Chip.

## 2 Github Link

<https://github.com/WIZnet-ioNIC/WIZnet-PICO-C/tree/main/examples/tftp>

## 3 Applicable products

[Raspberry Pi Pico & WIZnet Ethernet HAT](#)

[W5100S-EVB-Pico](#)

[W5500-EVB-Pico](#)

[W55RP20-EVB-Pico](#)

[W5100S-EVB-Pico2](#)

[W5500-EVB-Pico2](#)

## 4 How to Test TFTP Client Example

### 4.1 Step 1: Prepare software

The following serial terminal program and TFTP server are required for TFTP Client example test, download and install from below links.

- [Tera Term](#)
- [TFTP Server](#)

### 4.2 Step 2: Prepare hardware

If you are using W5100S-EVB-Pico, W5500-EVB-Pico, W55RP20-EVB-Pico, W5100S-EVB-Pico2 or W5500-EVB-Pico2, you can skip '1. Combine...'

1. Combine WIZnet Ethernet HAT with Raspberry Pi Pico.
2. Connect ethernet cable to WIZnet Ethernet HAT, W5100S-EVB-Pico, W5500-EVB-Pico, W55RP20-EVB-Pico, W5100S-EVB-Pico2 or W5500-EVB-Pico2 ethernet port.
3. Connect Raspberry Pi Pico, W5100S-EVB-Pico or W5500-EVB-Pico to desktop or laptop using 5 pin micro USB cable. W55RP20-EVB-Pico, W5100S-EVB-Pico2 or W5500-EVB-Pico2 require a USB Type-C cable.

### 4.3 Step 3: Setup TFTP Client Example

To test the TFTP Client example, minor settings shall be done in code.

1. Setup SPI port and pin in 'w5x00\_spi.h' in 'WIZnet-PICO-C/port/ioLibrary\_Driver/' directory.

Setup the SPI interface you use.

- If you use the W5100S-EVB-Pico, W5500-EVB-Pico, W5100S-EVB-Pico2 or W5500-EVB-Pico2,

```
/* SPI */
#define SPI_PORT spi0

#define PIN_SCK 18
#define PIN_MOSI 19
#define PIN_MISO 16
#define PIN_CS 17
#define PIN_RST 20
```

- If you want to test with the TFTP Client example using SPI DMA, uncomment USE\_SPI\_DMA.

```
/* Use SPI DMA */
//#define USE_SPI_DMA // if you want to use SPI DMA, uncomment.
```

- If you use the W55RP20-EVB-Pico,

```
/* SPI */
#define USE_SPI_PIO

#define PIN_SCK 21
#define PIN_MOSI 23
#define PIN_MISO 22
#define PIN_CS 20
#define PIN_RST 25
```

2. To run this example, you need to apply the '0002\_iolibrary\_driver\_tftp.patch' file as follows:

```
// Patch
git apply ./patches/0002_iolibrary_driver_tftp.patch
```

3. Setup network configuration such as IP in 'w5x00\_tftp\_client.c', which is the TFTP Client example in 'WIZnet-PICO-C/examples/tftp/' directory.

- Setup IP, other network settings to suit your network environment.

```
/* Network */
```

```
static wiz_NetInfo g_net_info =
{
    .mac = {0x00, 0x08, 0xDC, 0x12, 0x34, 0x56},      // MAC address
    .ip = {192, 168, 11, 2},                            // IP address
    .sn = {255, 255, 255, 0},                          // Subnet Mask
    .gw = {192, 168, 11, 1},                            // Gateway
    .dns = {8, 8, 8, 8},                                // DNS server
    .dhcp = NETINFO_STATIC                           // DHCP enable/disable
};
```

4. Setup TFTP client configuration in 'w5x00\_tftp\_client.c' in 'WIZnet-PICO-C/examples/tftp/' directory.
  - Set the IP address of the TFTP server to connect to and the name of the file to be read.

```
#define TFTP_SERVER_IP "192.168.11.2"
#define TFTP_SERVER_FILE_NAME "tftp_test_file.txt"
```

5. Set the port of the TFTP server to connect to in 'tftp.h' under the 'WIZnet-PICO-C/libraries/ioLibrary\_Driver/Internet/TFTP' directory.

```
#define TFTP_SERVER_PORT 69
```

## 4.4 Step 4: Build

1. After completing the TFTP Client example configuration, click 'build' in the status bar at the bottom of Visual Studio Code or press the 'F7' button on the keyboard to build.
2. When the build is completed, 'w5x00\_tftp\_client.uf2' is generated in 'WIZnet-PICO-C/build/examples/tftp/' directory.

## 4.5 Step 5: Upload and Run

1. While pressing the BOOTSEL button of Raspberry Pi Pico, W5100S-EVB-Pico, W5500-EVB-Pico, W55RP20-EVB-Pico, W5100S-EVB-Pico2 or W5500-EVB-Pico2 power on the board, the USB mass storage 'RPI-RP2' is automatically mounted.

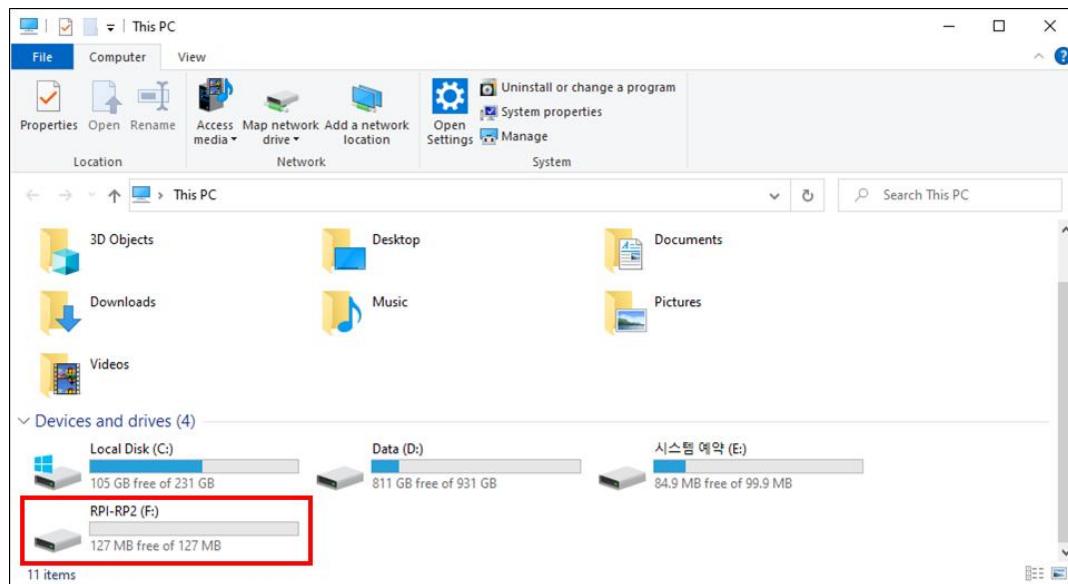


Figure 1. USB mass storage

2. Drag and drop 'w5x00\_tftp\_client.uf2' onto the USB mass storage device 'RPI-RP2'.
3. Connect to the serial COM port of Raspberry Pi Pico, W5100S-EVB-Pico, W5500-EVB-Pico, W55RP20-EVB-Pico, W5100S-EVB-Pico2 or W5500-EVB-Pico2 with Tera Term.

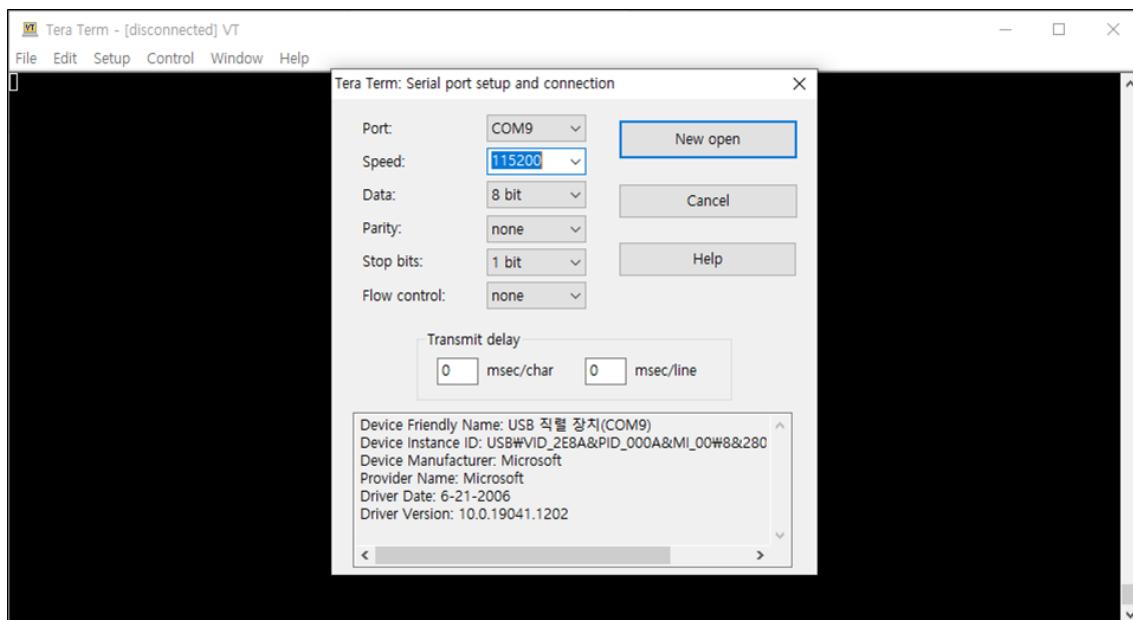


Figure 2. Tera Term

4. Reset your board.

5. Open the TFTP server.
6. You need to go to the file tab in the top left corner of the server and configure the settings.  
Set the root directory in the Storage section to define the path where the example client will read the file from.

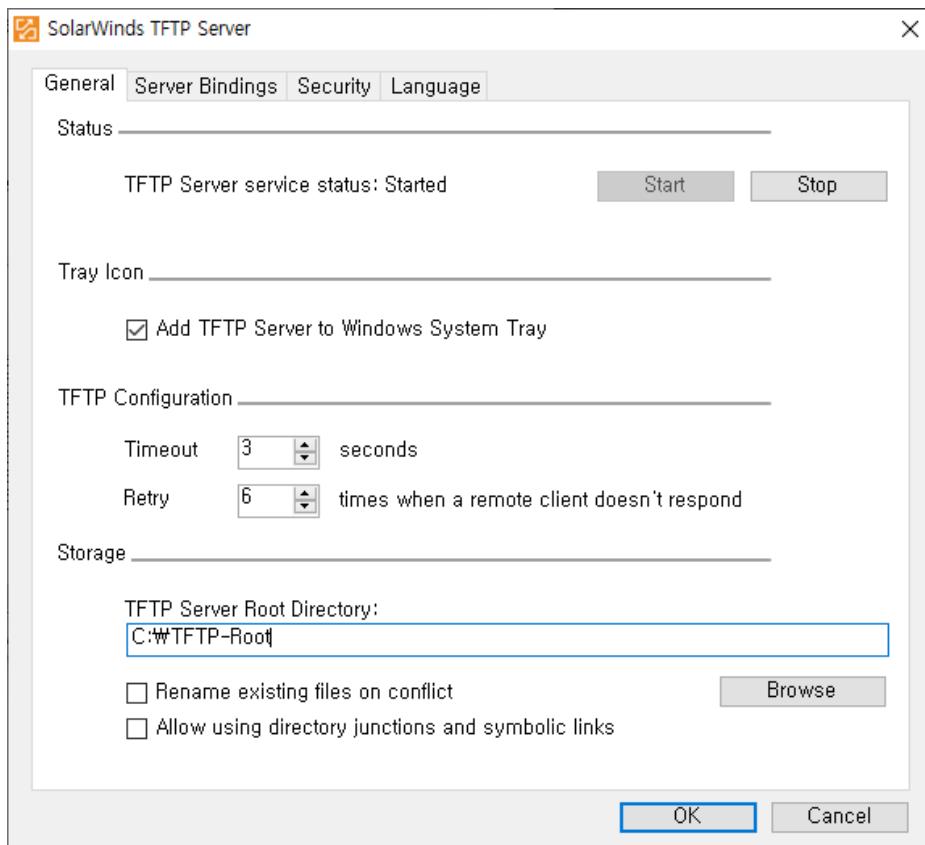


Figure 3. Configure TFTP server

7. Then, create a text file with the same name as the TFTP\_SERVER\_FILE\_NAME set in the code in the configured path.


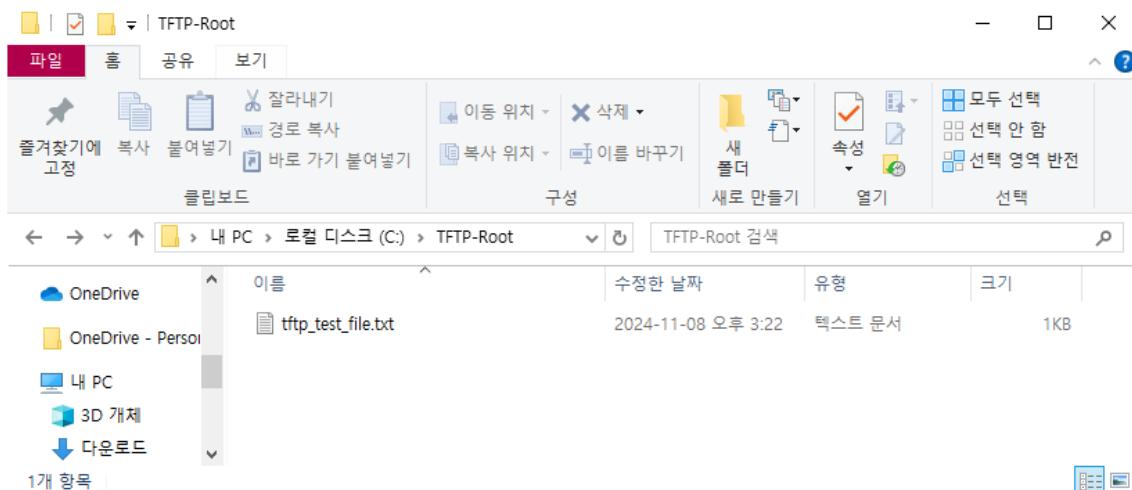


Figure 4. Create Test file


8. If the TFTP client example works normally on Raspberry Pi Pico, W5100S-EVB-Pico, W5500-EVB-Pico, W55RP20-EVB-Pico, W5100S-EVB-Pico2 or W5500-EVB-Pico2, You can view the network information, send a request to the TFTP server, and successfully read the file.

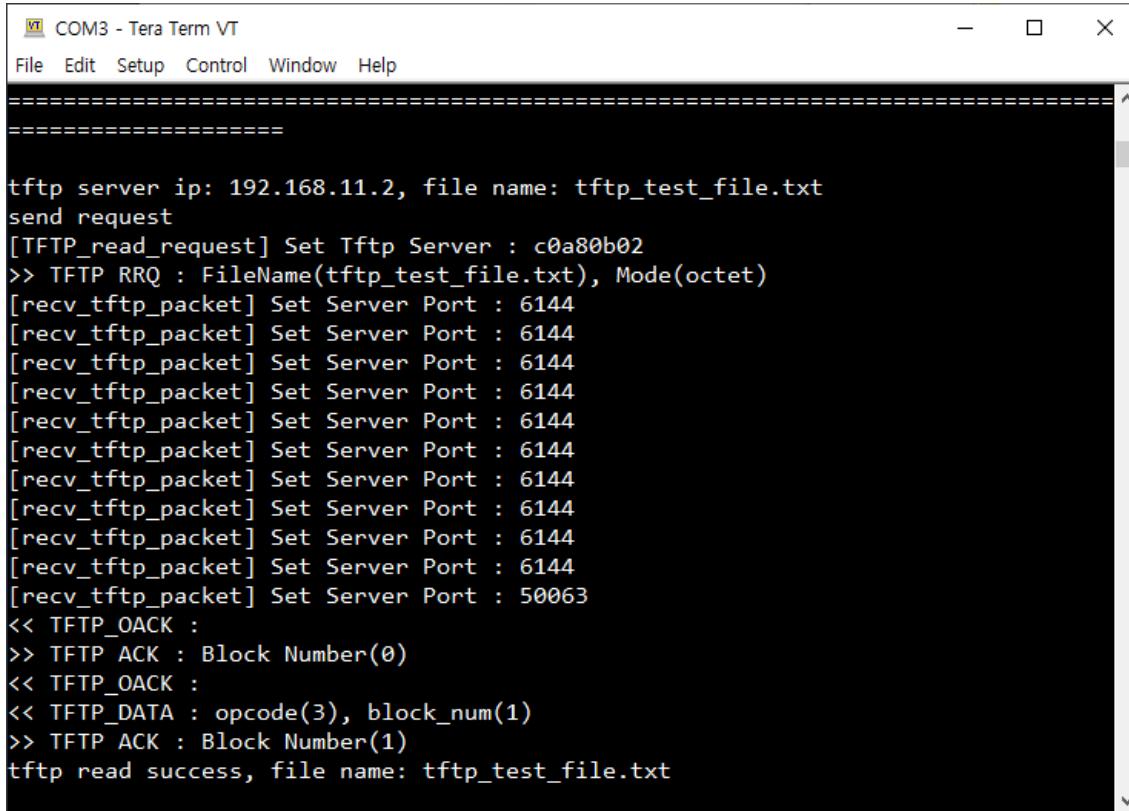

```
COM3 - Tera Term VT
File Edit Setup Control Window Help
=====
=====
tftp server ip: 192.168.11.2, file name: tftp_test_file.txt
send request
[TFTP_read_request] Set Tftp Server : c0a80b02
>> TFTP RRQ : FileName(tftp_test_file.txt), Mode(octet)
[recv_tftp_packet] Set Server Port : 6144
[recv_tftp_packet] Set Server Port : 50063
<< TFTP_OACK :
>> TFTP ACK : Block Number(0)
<< TFTP_OACK :
<< TFTP_DATA : opcode(3), block_num(1)
>> TFTP ACK : Block Number(1)
tftp read success, file name: tftp_test_file.txt
```

Figure 5. TFTP client read success


9. This is the server's execution screen when the connection is successfully established.

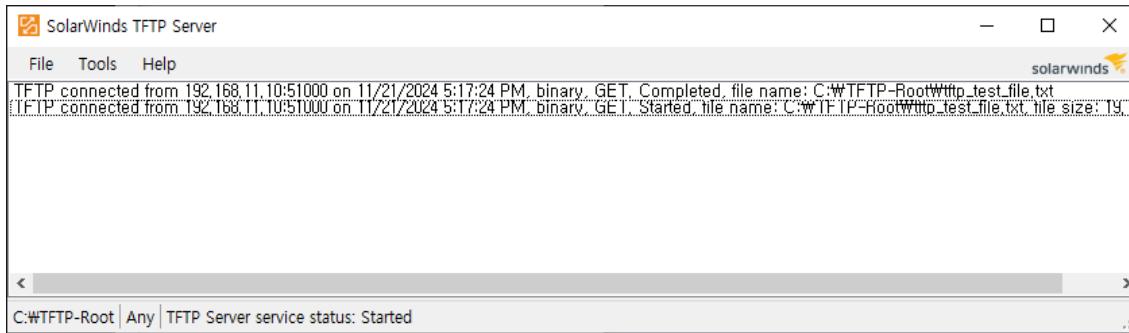

```
SolarWinds TFTP Server
File Tools Help
solarwinds
TFTP connected from 192.168.11.10:51000 on 11/21/2024 5:17:24 PM, binary, GET, Completed, file name: C:\TFTP\Root\http_test_file.txt
TFTP connected from 192.168.11.10:51000 on 11/21/2024 5:17:24 PM, binary, GET, Started, file name: C:\TFTP\Root\http_test_file.txt, file size: 19
C:\TFTP\Root | Any | TFTP Server service status: Started
```

Figure 6. Run TFTP server

10. If the file reading fails, the following screen will appear.

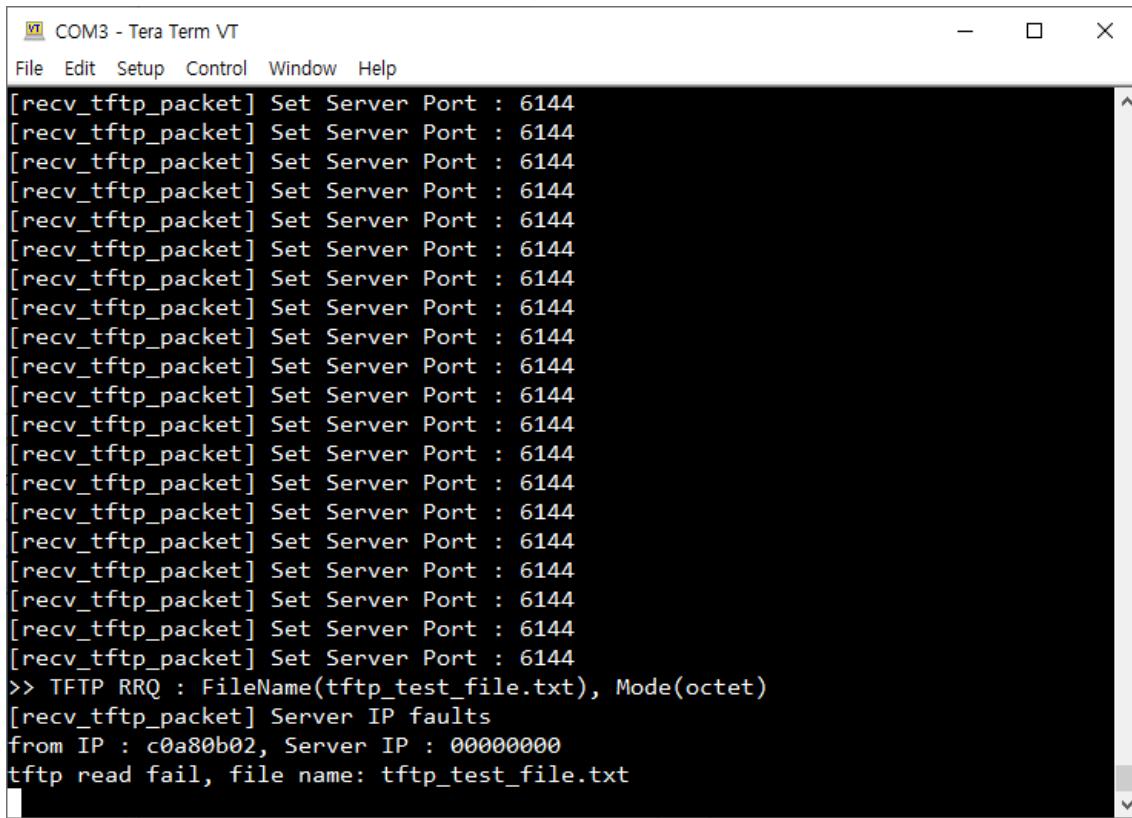

The screenshot shows a terminal window titled "COM3 - Tera Term VT". The console output displays repeated log entries from a TFTP client. The entries show the client attempting to set the server port to 6144 and receiving an acknowledgement. Eventually, it sends a TFTP Read Request (RRQ) for the file "tftp\_test\_file.txt". The response indicates that the server IP has faults, and the final message states "tftp read fail, file name: tftp\_test\_file.txt".

```
[recv_tftp_packet] Set Server Port : 6144
>> TFTP RRQ : FileName(tftp_test_file.txt), Mode(octet)
[recv_tftp_packet] Server IP faults
from IP : c0a80b02, Server IP : 00000000
tftp read fail, file name: tftp_test_file.txt
```

Figure 7. TFTP client read fail

11. This is a screenshot capturing the client's IP using Wireshark.

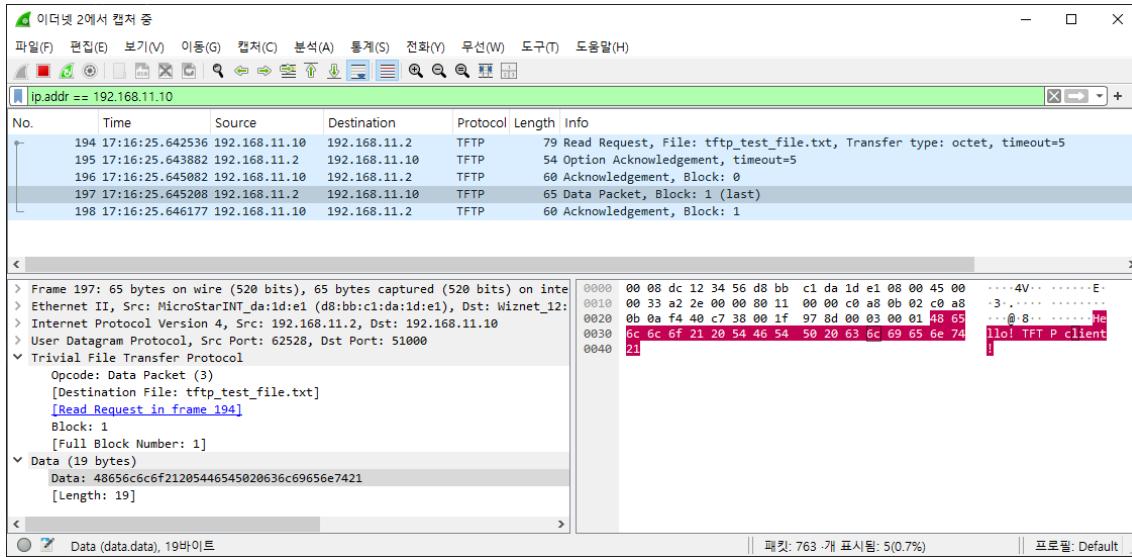


Figure 8. TFTP client Wireshark result

## Revision history

Version	Date	Descriptions
Ver. 1.0.0	Nov, 2024	Initial release.

Table 1. Revision history

## Copyright Notice

Copyright 2024 WIZnet Co., Ltd. All Rights Reserved.

Technical Support: <https://forum.wiznet.io/>

Sales & Distribution: [sales@wiznet.io](mailto:sales@wiznet.io)

For more information, visit our website at <https://www.wiznet.io/>